

2020 / 2021 Africa Twin and Africa Twin Adventure Sports ES System Update Instructions.



This latest version, designed for 2020-2021 Africa Twin and Africa Twin Adventure Sports ES, offers the following improvements: [Download Software Manual](#)

- Android Auto added (Ensure that you use the factory USB cable that came with your phone when connecting your Android phone to your unit)
- Passenger volume control added
- Average speed shows until the first decimal place

WHAT YOU WILL NEED

- A USB flash drive, 2.0 applicable with more than 512MB storage.
- A computer with a high-speed Internet connection.
- Between 30-60 minutes of time.
- Connect a battery charger to the unit if unsure of the charge state of the battery.

FORMAT THE USB DRIVE

Windows

- Insert the USB drive into an available USB port on your computer.
- On your computer, locate the “removable disc” for the flash drive.
- Right-click and then select “Format” from the sub-menu. **(Note: This step will erase all existing content from the drive.)**
- Select “**FAT32**,” from the drop down menu.
- Click “**Start**”, then “**OK**” when the “**Warning**” message appears.
- Click “**OK**” when the “Format Complete” message appears.

Mac

- Plug the USB drive into your Mac. (May need type C to type A adaptor).
- Go to **Applications>Utilities** and **launch Disk Utility**.
- Click on the **USB drive** in the sidebar in **Disk Utility**.
- Click **Erase** in the **Disk Utility** toolbar.
- Type in a name for the formatted disk.
- Click on the **Format** menu and choose **Mac OS Extended**.
- Click **Erase**.

DOWNLOAD THE SOFTWARE

- Download the software to your USB. [Download File Here](#)
- Save the file to your USB drive.
Do not change the file name (**File name: CRF1100_v.3.10.update**)
- Disconnect the USB drive from your computer.

NOTES:

Various settings are not changed by this update.
Please perform this update procedure after parking in a safe place.
Change setting of PC to “show the extension of file” before update.

2020 / 2021 Africa Twin and Africa Twin Adventure Sports ES System Update Instructions.




UPDATE YOUR AFRICA TWIN

****NOTE:** The screen used in the instructions below are examples only. The actual SW version numbers may differ from the illustrations.

1. Turn on the Ignition Switch

Confirm the battery voltage is 12.0V or more on the MID screen. Also, turn off the functions like grip heater, FOG lamp etc. to reduce battery consumption.

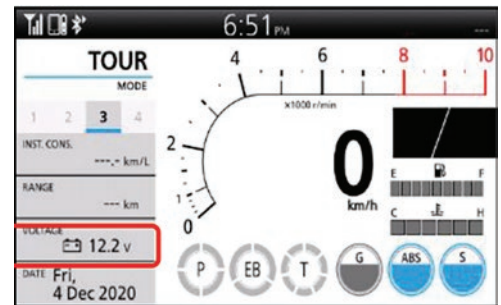

2. Connect the USB Drive

Insert the USB drive containing the program update to the USB connector on the motorcycle. The update automatically starts about 10 sec after inserting the USB drive.

*USB connector space is narrow, use small size USB drive or use small size USB extension cable as shown by illustration.




3. Check the Status

Navigate to the System Information Screen: **Settings>Service>System information**. From this screen you will confirm that the Software Update is Installing. Time required is about 7 minutes.


***IMPORTANT - Do not turn the ignition off during the update. MID may be corrupted and never start again.**

*Software version before update is 2.60 or 2.80.

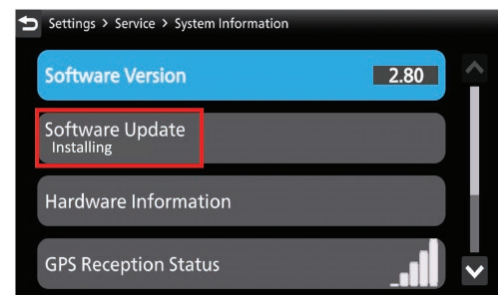

4. Confirm the Update has Completed

The MID will automatically re-start after update finished. Disconnect the USB drive after meter screen appears on the MID. Review by navigating through the menu: **Settings>Service>System information**, and confirm that the Software Version is 3.10.

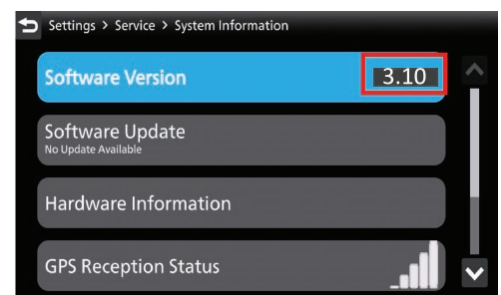


2020 / 2021 Africa Twin and Africa Twin Adventure Sports ES System Update Instructions.



Notes:

After the update completes, two confirmation files will be generated in the USB drive. If you update another unit using same USB drive, you must delete those 2 files. Otherwise, the update will not start - even if you connect USB drive to the unit.

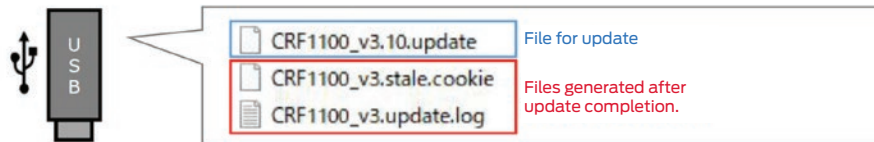

File Deletion Confirmation Procedure

1. Connect USB drive to PC
2. Access data in USB drive
3. Delete the two files indicated - “**CRF1100_v3.stale.cookie**” and “**CRF1100_v3.update.log**”

